

FUSION-LOC INSTALLATION

INSTRUCTIONS

1. Select where you want to mount your product. Ensure suction cups are not mounted on grout lines, joins, cracks or holes. Clean the mounting area with methylated spirits or cleaning alcohol and allow to air dry.
2. If you have purchased a hook please follow this step, otherwise go to **STEP 3**. While holding the suction cup in your hand, firmly hold the hook and slide it upwards to remove it from the base of the suction cup. This will reveal the centre valve. It may be a little stiff when brand new.




3. Hold the suction cup firmly against the wall in the mounting position ensuring that the arrow below the centre valve is pointing directly downwards. This is very important.

Centre valve



4. Hold your first suction cup against the wall and firmly place the pump over the centre valve. Apply a little force to the pump against the suction cup and pump 6-8 times. Ensure the pump maintains a tight seal around the centre valve. You should feel some resistance against the pump handle when pumping. Please note that you can pump as many times as you

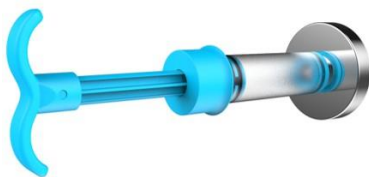

- like, you cannot damage the suction cup by over pumping.
5. If your accessory comes with two suction cups install the second suction cup now in the desired location.
 6. Test that you have attached your suction cups correctly by attempting to remove your suction cup with your hand. If you can pull it off then please re-install. If this persists please see our troubleshooting guide. If you are unable to remove the suction with your hand then you have installed it correctly.
 7. Attach your accessory by sliding the round centre caps down onto the suction cup. If they do not slide down, please check that the arrow is facing down on the suction cup, refer to **STEP 3**.

FOR INSTALLATION VIDEOS PLEASE VISIT OUR WEBSITE

www.fusionloc.com.au

HOW TO REMOVE YOUR FUSION-LOC SUCTION CUP

1. Slide centre caps up to remove your accessory from the suction cups.
2. Using your fingernail, gently move the centre valve away from the side wall of the centre valve housing. This will allow air to travel inside the suction cup and will release the suction. You will hear a



“pssst” sound which is the suction releasing. Please note that you **DO NOT** remove the centre valve, if it does come out of the housing, please push it back in.

3. Using a slight twisting action, pull the suction cup off the wall. It may appear to be stuck as the grey sealing rubber can be sticky, this is normal. The grey rubber may remain on the wall. If this happens simply peel the grey rubber off the wall and insert back onto the back of the suction cup.
4. Before re-installing your suction cup rinse sealing rubber under warm water and allow to air dry.

FOR SUCTION CUP REMOVAL VIDEOS PLEASE VISIT OUR WEBSITE

www.fusionloc.com.au

CARE AND MAINTENANCE

Wipe accessory dry after use with clean microfibre cloth. Do not use any cleaning chemicals on any part of the product as this may cause damage.

For peace of mind remove your accessory and repump 6 times every 12 months, please note that you do not need to remove your suction cups, simply re-pump.

TROUBLESHOOTING GUIDE

1. **SUCTION CUP COMES OFF** – Your surface is porous or centre valve is leaking air into suction cup. Follow these steps in order.

STEP 1. Test your pump by placing thumb over the end of the pump and extending handle, you should feel the suction. If not please contact us for a replacement.

STEP 2. Test suction cup by installing on a glass surface (you don't need to install your accessory, just the suction cups). This tests that your suction cups are functioning correctly.

If it fails on glass please complete the following – Remove centre valve and grey sealing rubber, soak all suction cup parts in hot water for 20 minutes, allow to air dry, re-assemble and install again. If this fails to rectify the issue, please contact us directly for a new suction cup via our email evolve.enquiries@evolvelifewares.com.au

If it works on glass this indicates that your surface isn't suitable (porous or damaged), please use our Porous Wall Adhesive Disc (Product Code 99039, sold separately).

2. **Centre cap won't slide down** – Ensure suction cup was installed with the arrow facing directly downwards (STEP 3).

Caution – The weight limit is to be used as a guide only and may vary from surface to surface. Do not overload. Do not place any items of value in accessory in case of unforeseen circumstances of suction cup failure.

WARRANTY PROCEDURE

For a warranty claim or enquiry contact –

Email

evolve.enquiries@evolvelifewares.com.au

Mail

Evolve Lifewares Pty Ltd
PO BOX 838
Chatswood NSW 2057

Phone (Mon – Thurs 9am – 3pm)
(02) 9415 2935



**Fusion-Loc is a Registered
Trademark of Evolve
Lifewares Pty Ltd**