


FUSION-LOC INSTALLATION


INSTRUCTIONS

****PLEASE READ ALL INSTRUCTIONS PRIOR TO INSTALLING – PLEASE KEEP INSTRUCTIONS FOR FUTURE USE****

1. Select where you want to mount your product. Ensure suction cups are not to be mounted on grout lines, joints, cracks or holes. Clean the mounting area with methylated spirits or cleaning alcohol and allow to air dry.
2. If your pump has a bumper stuck to it attach them to the bottom of the flat bracket that rests against the wall (not all products have them).

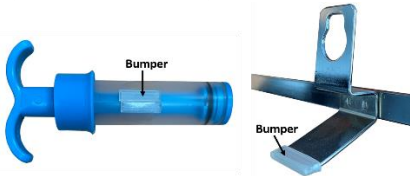

3. Remove the centre cap from each suction cup by sliding the cap upwards. This will reveal the centre valve.

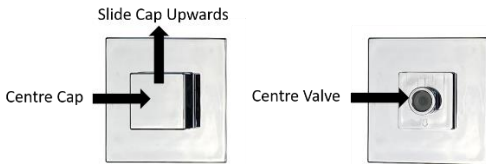

4. Install your first suction cup by placing the suction cup against the wall in chosen position with the arrow facing downwards.



While holding the suction cup with one hand, place the pump over the centre valve. Apply a moderate force with the pump against the suction cup and pump a minimum of 6-8 times. Ensure the pump maintains a tight seal around the centre valve while pumping. You should feel resistance with each pump.

5. If your accessory only uses one suction cup go to step 9.
6. If you have a double caddy refer to step 7, otherwise place your accessory onto the installed suction cup to determine the mounting position of the second suction cup. Remove accessory and install second suction cup.



7. (Double caddy only) Once you have installed your first suction cup on the wall, attach a frame to the installed suction cup. Ensure the wall spacer is facing the wall. Slide the centre cap on. Now attach the second suction cup to the 2nd frame (at this stage you haven't installed the suction cup yet). While holding the 2nd suction cup near where you wish to install it, insert both caddies into the two sets of holes in the frames. This will ensure that you position the 2nd suction cup correctly. While holding the 2nd suction cup in place on the wall in the desired location, remove the centre cap, place the pump over the centre valve (there is no need to remove the frame as you can pump over the top of it) and install 2nd suction cup. Slide on the cap. There is no need to go to step 9



8. Once you have installed your suction cups, test the installation by attempting to pull each suction cup off the wall with your hands. If you can pull a suction cup off then re-install it, if it continues to happen, please refer to the troubleshooting guide on this sheet.
9. After attaching your Fusion-Loc accessory onto the suction cups, slide on the centre caps.

Visit www.fusionloc.com.au to watch our installation videos

HOW TO REMOVE YOUR FUSION-LOC SUCTION CUPS

1. Slide up and remove the centre cap.
2. Using your fingernail, move the centre valve away from the side wall of the centre valve housing. This will allow air to travel inside the suction cup and release the suction. Please note that you do **NOT** remove the centre valve. You will hear a “pssst” sound which is the suction releasing.



3. Now pull off the suction cup with a twisting action. If you cannot remove the suction cup, slide a thin object in between the wall and grey rubber. The grey sealing rubber may still be tacky so it may appear as though it is stuck, this is normal and may remain stuck to the wall when you pull off the suction cup. If this happens then peel off the grey rubber from the wall and insert into the back of the suction cup.



Grey Rubber

4. Before re-installing ensure the grey rubber is rinsed in warm water and allowed to air dry.

CARE AND MAINTENANCE

Clean accessory with a damp clean cloth and then wipe dry with a microfibre cloth. Do not use any harsh or corrosive cleaning agents. For peace of mind remove your accessory and repump 6 times every 12 months while leaving your suction cup on your wall. When reinstalling rinse suction cups, rinse under warm water and let air dry before installing.

TROUBLESHOOTING GUIDE

1. Suction cup falls off – Your surface is porous or centre valve is leaking air into suction cup. Firstly, test your suction cup by installing onto some glass like your shower screen. If it fails on glass, please complete the following steps.
 - a. Remove grey sealing rubber and centre valve, soak in hot water for 20 minutes.
 - b. Allow to air dry and then insert them back into the suction cup.
 - c. Install suction cup again, if this does not solve the issue, please email us directly for a replacement suction cup. Include a photo of your suction cup, name, address and phone number.

evolve.enquiries@evolvelifewares.com.au

2. If it doesn't fail on glass your wall is porous, has a hair line crack or some other underlying issue. You will need to use our Porous Wall Adhesive Discs (product code 44561).
3. Centre cap won't slide down – Ensure suction cup was installed with the arrow facing down (refer to step 4).

Caution – The weight limit is to be used as a guide only. Do not overload. Do not place any items of value in accessory in case of unforeseen circumstances of suction cup failure. Fusion-Loc suction cups have not been designed for use with pump pack products. Please remove pump packs from the caddy prior to use. Fusion-Loc suction cups have been designed to be used on non-porous surfaces such as glazed tiles, glass and most rigid laminates. Please ensure that your wall is suitable for suction products and is in sound condition as installing a suction cup on some surfaces may cause damage to the wall.

WARRANTY PROCEDURE

For warranty claim, support or enquiry contact –

Email evolve.enquiries@evolvelifewares.com.au

Post Evolve Lifewares
PO BOX 838
Chatswood NSW 2057



Fusion-Loc is a Registered
Trademark of Evolve
Lifewares Pty Ltd